



## CASEMENT SASH REMOVAL

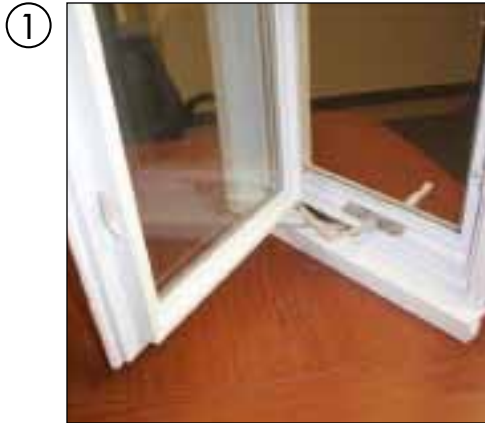

① Open the sash wide enough to access the casement hardware.



② Use a slotted screwdriver placed under the arm at the brass pin, turn clockwise to release the arm that is joined to the hinge track.

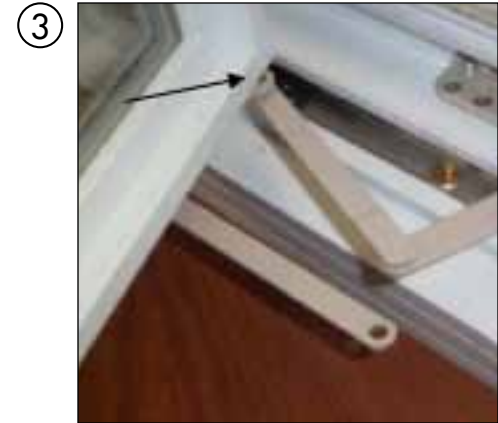

③ You are now ready to release the mechanism arm from the bracket under the sash.




④ Placing a slotted screwdriver between the arm and bracket under the sash, turn clockwise to release the arm.

**Note:** If the window is wider than 23-5/8", the mechanism will have a dual arm connected to the sash. The additional arm can be released from the sash, the same way.



⑤ The half hinge at the top of the sash is now in a position to be removed from the frame.

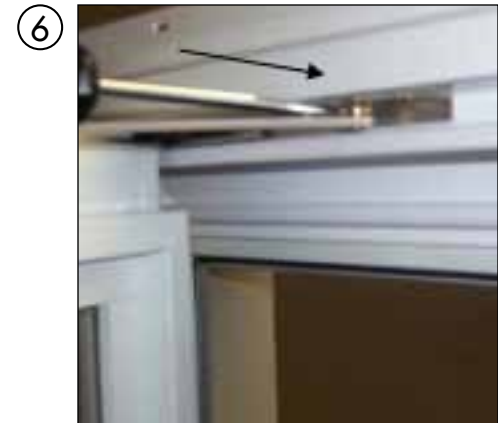

⑥ Placing a slotted screwdriver at the brass pin, and using the same procedure as before, release the arm from the frame.

## CASEMENT SASH REMOVAL

7



The sash is now ready to be removed. Slide the sash out of the hinge track, following the arrow direction.

8



The top of the sash is now free from the frame.

9



The bottom of the sash is now free from the frame.

*To replace the sash, follow the procedures in reverse.*