


### FOOT LOCK ASSEMBLY FOR 7-1/4" PATIO DOOR

Caution: these holes will be for the short screws on OX and XO

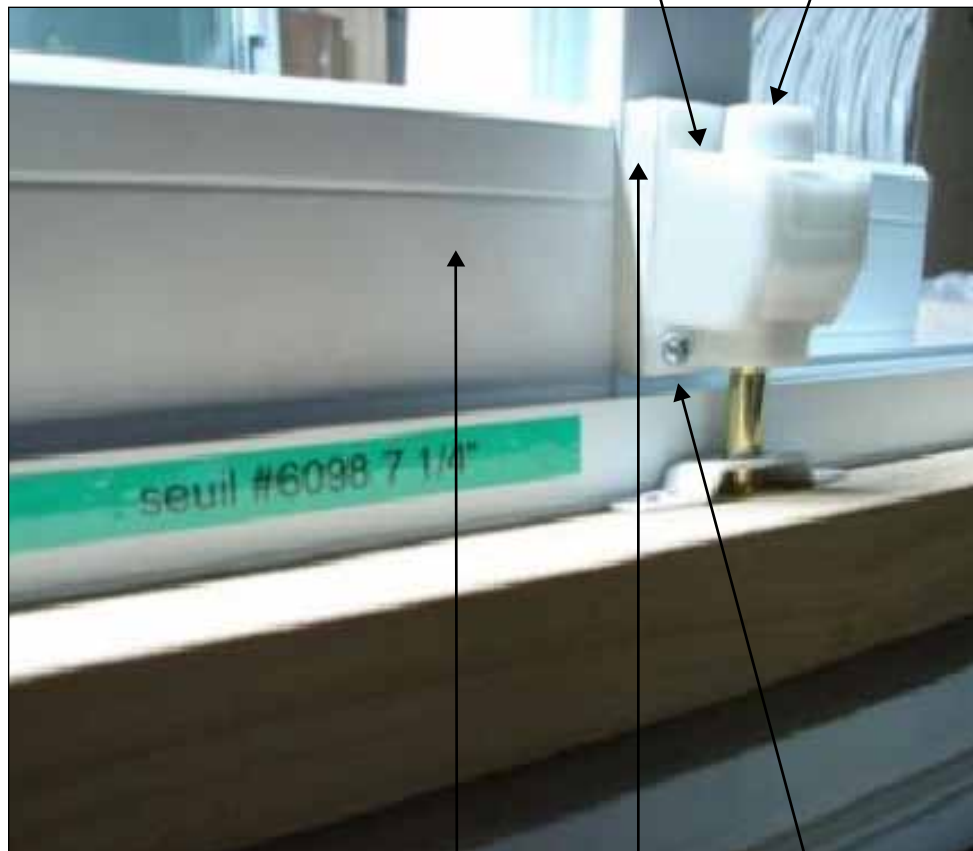

- 1 Ensure door panel is in the closed position
- 2 Place foot lock on the operator meeting rail and predrill with a 1/8" drill bit
- 3 Place foot lock and block 2-1/2" from the bottom of the high back sill to the top end of the foot lock

1

2

3